

Fig. 2-4 Setting the Bar Display Colour Configuration (Display Menu)

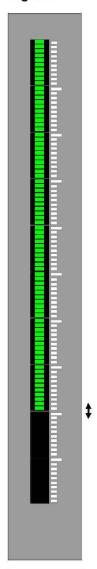

## 20 CIr1

#### Step 1


Press up/down arrow keys to move the green bar up or down. This sets the position of the lower transition point from green to red. This will typically be the Lo Limit Spec. position. If the final configuration will include an AMBER approach area, set the green bar position to include the amber area of the display. Press <Enter>.

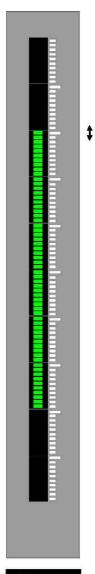

### 80 Clr2

### Step 2


Press up/down arrow keys to move the top of the green bar up or down. This sets the position of the upper transition point from green to red. This will typically be the Hi Limit Spec. position. If the final configuration will include an AMBER approach area, set the green bar position to include the amber area of the display. Press <Enter>

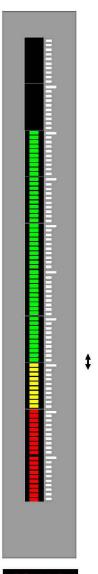

## 30 CIr3

#### Step 3

Press up the Up/Down arrow keys to move the position of the lower red colour bar into the green section. As this moves into the green area, the overlap of red and green creates an AMBER "Approach" area. Press <Enter>.

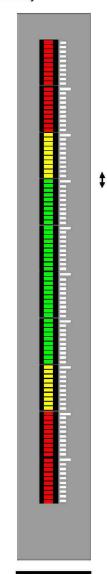

# 70 Clr4

#### Step 4

Press up the Up/Down arrow keys to move the position of the upper red colour bar into the green section. As this moves into the green area, the overlap of red and green creates an AMBER "Approach" area. Press <Enter>.